

Departure Standard Taxi Routes South Flow

Table 1.1 Departure Standard Taxi Routes South Flow

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 17R - BRIDGE	105-107	HY, Y Hold Short of JY	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>contact</u> Ground 121.65 on Taxiway Y Bridge
	110-144	G, Y Hold Short of JY	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>contact</u> Ground 121.65 on Taxiway Y Bridge
RWY 17R - OUTER	5-7	JY, Y, L, EH	When exiting the ramp, hold short of Z, monitor ground on 121.65, then monitor Tower 126.55 North of Y
	9	K, Z, L, EH	When exiting the ramp, hold short of K, monitor ground on 121.65, then monitor Tower 126.55 North of Y
	10	K5, L, EH	
	11, 13, 14	K, K5, L, EH	
	15	K6, L, EH	
	22-32	K, K6, L, EH	
	33-49	K, K7, L, EH	
	51-53	B, K, K7, L, EH	When exiting the ramp, hold short of B, <u>monitor</u> ground on 121.8, then <u>monitor</u> Tower 126.55 North of Y
	On Y Bridge	L, EH	<u>Monitor</u> Tower 126.55 North of Y

Table 1.1 Departure Standard Taxi Routes South Flow (Continued)

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 17R - INNER	5-7	JY, Y, K, EG	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.65, then <u>monitor</u> Tower 126.55 North of Y
	9-49	K, EG	When exiting the ramp, hold short of K, <u>monitor</u> ground on 121.65, then <u>monitor</u> Tower 126.55 North of Y
	51-53	B, K, EG	When exiting the ramp, hold short of B, <u>monitor</u> ground on 121.8, then <u>monitor</u> Tower 126.55 North of Y
	On Y Bridge	K, EG	<u>Monitor</u> Tower 126.55 North of Y
RWY 17R - FULL LENGTH	5-7	JY, Y, J, EF	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.65, then <u>Monitor</u> Tower 126.55 North of Y
	9-49	K, Y, J, EF	When exiting the ramp, hold short of K, monitor ground on 121.65, then monitor Tower 126.55 North of Y
	51-53	B, K, Y, J, EF	When exiting the ramp, hold short of B, <u>monitor</u> ground on 121.8, then <u>monitor</u> Tower 126.55 North of Y
	On Y Bridge	J, EF	<u>Monitor</u> Tower 126.55 North of Y

Table 1.1 Departure Standard Taxi Routes South Flow (Continued)

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 18L - BRIDGE	5-7	Z Hold Short of HY	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.65, then <u>contact</u> Ground 121.85 on Taxiway Z Bridge
	9-49	K, Z Hold Short of HY	When exiting the ramp, hold short of K, <u>monitor</u> ground on 121.65, then <u>contact</u> Ground 121.85 on Taxiway Z Bridge
	51-53	B Hold Short of HA	When exiting the ramp, hold short of B, <u>monitor</u> ground on 121.8, then <u>contact</u> Ground 121.85 on Taxiway Z Bridge
RWY 18L - OUTER	On Z Bridge	F, WH	<u>Monitor</u> Tower 124.15 North of Y
	105-107	Z, F, WH	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 North of Y
	110	G5, F, WH	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 North of Y
	111-117	G, G5, F, WH	
	118	G6, F, WH	
	122-144	G, G6, F, WH	
	On B Bridge	G, G6, F, WH	<u>Monitor</u> Tower 124.15 North of Y

Table 1.1 Departure Standard Taxi Routes South Flow (Continued)

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 18L - INNER	On Z Bridge	G, WG	<u>Monitor</u> Tower 124.15 North of Y
	105-107	Z, G, WG	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 North of Y
	110-144	G, WG	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 North of Y
	On B Bridge	G, WG	<u>Monitor</u> Tower 124.15 North of Y
RWY 18L - FULL LENGTH	On Z Bridge	HY, Y, H, WF	<u>Monitor</u> Tower 124.15 North of Y
	105-107	HY, Y, H, WF	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 North of Y
	110-144	G, Y, H, WF	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 North of Y
	On B Bridge	G, Y, H, WF	<u>Monitor</u> Tower 124.15 North of Y

Departure Standard Taxi Routes North Flow

Table 1.2 Departure Standard Taxi Routes North Flow

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 35L - BRIDGE	105-107	Z, G, A Hold Short of JA	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>contact</u> Ground 121.65 on Taxiway A Bridge
	110-144	G, A Hold Short of JA	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>contact</u> Ground 121.65 on Taxiway A Bridge
RWY 35L - OUTER	5-7	Z, K, K10, L, EP	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.8, then <u>monitor</u> Tower 126.55 South of A
	9-44	K, K10, L, EP	When exiting the ramp, hold short of K, <u>monitor</u> ground on 121.65, then <u>monitor</u> Tower 126.55 South of A
	45	K10, L, EP	
	46-48	K, K11, L, EP	
	49	K11, L, EP	When exiting the ramp, hold short of B, <u>contact</u> ground on 121.65, then <u>monitor</u> Tower 126.55 South of A
	51-53	JA, A, L, EP	
	On A Bridge	L, EP	

Table 1.2 Departure Standard Taxi Routes North Flow (Continued)

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 35L - INNER	5-7	Z, K, EQ	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.8, then <u>monitor</u> Tower 126.55 South of A
	9-49	K, EQ	When exiting the ramp, hold short of K, <u>monitor</u> ground on 121.65, then <u>monitor</u> Tower 126.55 South of A
	51-53	JA, A, K, EQ	When exiting the ramp, hold short of B, <u>contact</u> ground on 121.65, then <u>monitor</u> Tower 126.55 South of A
	On A Bridge	K, EQ	<u>Monitor</u> Tower 126.55 South of A
RWY 35L - FULL LENGTH	5-7	Z, K, A, JS, ER	When exiting the ramp, hold short of Z, <u>Monitor</u> ground on 121.8, then <u>monitor</u> Tower 126.55 South of A
	9-49	K, A, JS, ER	When exiting the ramp, hold short of K, <u>monitor</u> ground on 121.65, then <u>monitor</u> Tower 126.55 South of A
	51-53	JA, A, JS, ER	When exiting the ramp, hold short of B, <u>contact</u> ground on 121.65, then <u>monitor</u> Tower 126.55 South of A
	On A Bridge	JS, ER	<u>Monitor</u> Tower 126.55 South of A

Table 1.2 Departure Standard Taxi Routes North Flow (Continued)

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 36R - BRIDGE	5-7	Z Hold Short of HY	When exiting the ramp, hold short of Z, <u>Monitor</u> ground on 121.8, then contact Ground 121.85 on Taxiway Z Bridge
	9-49	K, B Hold Short of HA	When exiting the ramp, hold short of K, <u>monitor</u> ground on 121.65, then <u>contact</u> Ground 121.85 on Taxiway Z Bridge
	51-53	B Hold Short of HA	When exiting the ramp, hold short of B, <u>contact</u> ground on 121.65, then <u>contact</u> Ground 121.85 on Taxiway B Bridge
RWY 36R - OUTER	On Z Bridge	G, G10, F, WP	<u>Monitor</u> Tower 124.15 South of A
	105-107	Z, G, G10, F, WP	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 South of A
	110-144	G, G10, F, WP	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 South of A
	On B Bridge	F, WP	<u>Monitor</u> Tower 124.15 South of A

Table 1.2 Departure Standard Taxi Routes North Flow (Continued)

Taxi Instructions	Ramp Exit or Bridge Hold Spot	Taxi Route	Notes
RWY 36R - INNER	On Z Bridge	G, WQ	<u>Monitor</u> Tower 124.15 South of A
	105-107	Z, G, WQ	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 South of A
	110-144	G, WQ	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 South of A
	On B Bridge	G, WQ	<u>Monitor</u> Tower 124.15 South of A
RWY 36R - FULL LENGTH	On Z Bridge	G, A, HS, WR	<u>Monitor</u> Tower 124.15 South of A
	105-107	Z, G, A, HS, WR	When exiting the ramp, hold short of Z, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 South of A
	110-144	G, A, HS, WR	When exiting the ramp, hold short of G, <u>monitor</u> ground on 121.85, then <u>monitor</u> Tower 124.15 South of A
	On B Bridge	HA, A, HS, WR	<u>Monitor</u> Tower 124.15 South of A

Departure Standard Taxi Routes

Runway 17R

“Runway 17R Outer”

When exiting spots 5 through 7: Taxi to runway 17R via taxiway JY, Y, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spot 9: Taxi to runway 17R via taxiway K, Z, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spot 10: Taxi to runway 17R via taxiway K5, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spot 11, 13, 14: Taxi to runway 17R via taxiway K, K5, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spot 15: Taxi to runway 17R via taxiway K6, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spots 22 through 32: Taxi to runway 17R via taxiway K, K6, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spots 33 through 49: Taxi to runway 17R via taxiway K, K7, L and EH. Monitor tower 126.55 north of taxiway Y.

When exiting spots 51 through 53: Taxi to runway 17R via taxiway B, K, K7, L and EH. Monitor tower 126.55 north of taxiway Y.

When on the Y Bridge: Taxi to runway 17R via L and EH. Monitor tower 126.55 north of taxiway Y.

“Runway 17R Inner”

When exiting spots 5 through 7: “Taxi to runway 17R via taxiway JY, Y, K and EG. Monitor tower 126.55 north of taxiway Y”.

When exiting spots 9 through 49: Taxi to runway 17R via taxiway K and EG. Monitor tower 126.55 north of taxiway Y.

When exiting spots 51 through 53: Taxi to runway 17R via taxiway B, K and EG. Monitor tower 126.55 north of taxiway Y.

When on the Y Bridge: Taxi to 17R via taxiway K, and EG. Monitor tower 126.55 north of taxiway Y.

“Runway 17R Full Length”

When exiting spots 5 through 7: Taxi to runway 17R via taxiway JY, Y, J and EF. Monitor tower 126.55 north of taxiway Y.

When exiting spots 9 through 49: Taxi to runway 17R via taxiway K, Y, J and EF. Monitor tower 126.55 north of taxiway Y.

When exiting spots 51 through 53: Taxi to runway 17R via taxiway B, K, Y, J and EF. Monitor tower 126.55 north of taxiway Y.

When on the Y Bridge: Taxi to runway 17R via J and EF. Monitor tower 126.55 north of taxiway Y.

“Runway 17R Bridge”

When exiting spot 105 through 107: Taxi to runway 17R via taxiway HY and Y, hold short of JY unless further instructions are received. Contact ground 121.65 on taxiway Y bridge.

When exiting spot 110 through 144: Taxi to runway 17R via taxiway G and Y, hold short of JY unless further instructions are received. Contact ground 121.65 on taxiway Y bridge.

Runway 18L**“Runway 18L Outer”**

When on the Z Bridge: Taxi to runway 18L via taxiway F and WH. Monitor tower 124.15 north of taxiway Y.

When exiting spot 105 through 107: Taxi to runway 18L via Z, F, and WH. Monitor tower 124.15 north of taxiway Y.

When exiting spot 110: Taxi to runway 18L via taxiway G5, F and WH. Monitor tower 124.15 north of taxiway Y.

When exiting spot 111 through 117: Taxi to runway 18L via taxiway G, G5, F and WH. Monitor tower 124.15 north of taxiway Y.

When exiting spot 118: Taxi to runway 18L via taxiway G6, F, and WH. Monitor tower 124.15 north of taxiway Y.

When exiting spot 122 through 144: Taxi to runway 18L via taxiway G, G6, F and WH. Monitor tower 124.15 north of taxiway Y.

When on the B Bridge: Taxi to runway 18L via taxiway G, G6, F, and WH. Monitor tower 124.15 north of taxiway Y.

“Runway 18L Inner”

When on the Z Bridge: Taxi to runway 18L via G and WG. Monitor tower 124.15 north of taxiway Y.

When exiting spot 105 through 107: Taxi to runway 18L via taxiway Z, G and WG. Monitor tower 124.15 north of taxiway Y.

When exiting spot 110 through 144: Taxi to runway 18L via taxiway G and WG. Monitor tower 124.15 north of taxiway Y.

When on the B Bridge: Taxi to runway 18L via taxiway G and WG. Monitor tower 124.15 north of taxiway Y.

“Runway 18L Full Length”

When on the Z Bridge: Taxi to runway 18L via HY, Y, H and WF. Monitor tower 124.15 north of taxiway Y.

When exiting spot 105 through 107: Taxi to runway 18L via taxiway HY, Y, H and WF. Monitor tower 124.15 north of taxiway Y.

When exiting spot 110 through 144: Taxi to runway 18L via taxiway G, Y, H and WF. Monitor tower 124.15 north of taxiway Y.

When on the B Bridge: Taxi to runway 18L via taxiway G, Y, H and WF. Monitor tower 124.15 north of taxiway Y.

“Runway 18L Bridge”

When exiting spots 5 through 7: Taxi to runway 18L via taxiway Z, hold short of HY unless further instructions are received. Contact ground, 121.85 on taxiway Z bridge.

When exiting spots 9 through 49: Taxi to runway 18L via taxiway K and Z, hold short of HY unless further instructions are received. Contact ground, 121.85 on taxiway Z bridge.

When exiting spot 51 through 53: Taxi to runway 18L via taxiway B and hold short of HA unless further instructions are received. Contact ground 121.85 on taxiway B bridge.

Runway 35L

“Runway 35L Outer”

When exiting spots 5 through 7: Taxi to runway 35L via taxiway Z, K, K10, L and EP. Monitor tower 126.55 south of taxiway A.

When exiting spots 9 through 44: Taxi to runway 35L via taxiway K, K10, L and EP. Monitor tower 126.55 south of taxiway A.

When exiting spot 45: Taxi to runway 35L via taxiway K10, L and EP. Monitor tower 126.55 south of taxiway A.

When exiting spots 46 through 48: Taxi to runway 35L via taxiway K, K11, L and EP. Monitor tower 126.55 south of taxiway A.

When exiting spot 49: Taxi to runway 35L via taxiway K11, L and EP. Monitor tower 126.55 south of taxiway A.

When exiting spots 51 through 53: Taxi to runway 35L via JA, A, L and EP. Monitor tower 126.55 south of taxiway A.

When on the A Bridge: Taxi to runway 35L via L and EP. Monitor tower 126.55 south of taxiway A.

“Runway 35L Inner”

When exiting spots 5 through 7: Taxi to runway 35L via taxiway Z, K and EQ. Monitor tower 126.55 south of taxiway A.

When exiting spots 9 through 49: Taxi to runway 35L via taxiway K and EQ. Monitor tower 126.55 south of taxiway A.

When exiting spots 51 through 53: Taxi to runway 35L via JA, A, K and EQ. Monitor tower 126.55 south of taxiway A.

When on the A Bridge: Taxi to runway 35L via K and EQ. Monitor tower 126.55 south of taxiway A.

“Runway 35L Full Length”

When exiting spots 5 through 7: Taxi to runway 35L taxiway via Z, K, A, JS and ER. Monitor tower 126.55 south of taxiway A.

When exiting spots 9 through 49: Taxi to runway 35L via taxiway K, A, JS and ER. Monitor tower 126.55 south of taxiway A.

When exiting spots 51 through 53: Taxi to runway 35L via JA, A, JS, and ER. Monitor tower 126.55 south of taxiway A.

When on the A Bridge: Taxi to runway 35L via JS and ER. Monitor tower 126.55 south of taxiway A.

“Runway 35L Bridge”

When exiting spots 105 through 107: Taxi to runway 35L via taxiway Z, G, A, hold short of JA unless further instructions are received. Contact ground 121.65 on taxiway A bridge.

When exiting spots 110 through 144: Taxi to runway 35L via taxiway G, A, hold short of JA unless further instructions are received. Contact ground 121.65 on taxiway A bridge.

Runway 36R**“Runway 36R Outer”**

When on the Z Bridge: Taxi to runway 36R via G, G10, F and WP. Monitor tower 124.15 south of taxiway A.

When exiting spots 105 through 107: Taxi to runway 36R via taxiway Z, G, G10, F and WP. Monitor tower 124.15 south of taxiway A.

When exiting spots 110 through 144: Taxi to runway 36R via taxiway G, G10, F and WP. Monitor tower 124.15 south of taxiway A.

When on the B Bridge: Taxi to runway 36R via F and WP. Monitor tower 124.15 south of taxiway A.

“Runway 36R Inner”

When on the Z Bridge: Taxi to runway 36R via G and WQ. Monitor tower 124.15 south of taxiway A.

When exiting spots 105 through 107: Taxi to runway 36R via taxiway Z, G and WQ. Monitor tower 124.15 south of taxiway A.

When exiting spots 110 through 144: Taxi to runway 36R via taxiway G and WQ. Monitor tower 124.15 south of taxiway A.

When on the B Bridge: Taxi to runway 36R via G and WQ. Monitor tower 124.15 south of taxiway A.

“Runway 36R Full Length”

When on the Z Bridge: Taxi to runway 36R via G, A, HS and WR. Monitor tower 124.15 south of taxiway A.

When exiting spots 105 through 107: Taxi to runway 36R via taxiway Z, G, A, HS and WR. Monitor tower 124.15 south of taxiway A.

When exiting spots 110 through 144: Taxi to runway 36R via taxiway G, A, HS and WR. Monitor tower 124.15 south of taxiway A.

When on the B Bridge: Taxi to runway 36R via HA, A, HS and WR. Monitor tower 124.15 south of taxiway A.

“Runway 36R Bridge”

When exiting spots 5 through 7: Taxi to runway 36R via taxiway Z and hold short of HY unless further instructions are received. Contact ground on 121.85 on taxiway Z bridge.

When exiting spots 9 through 49: Taxi to runway 36R via taxiway K and B, hold short of HA unless further instructions are received. Contact ground 121.85 on taxiway B bridge.

When exiting spots 51 through 53: Taxi to runway 36R via taxiway B and hold short of HA unless further instructions are received. Contact ground 121.85 on taxiway B bridge.

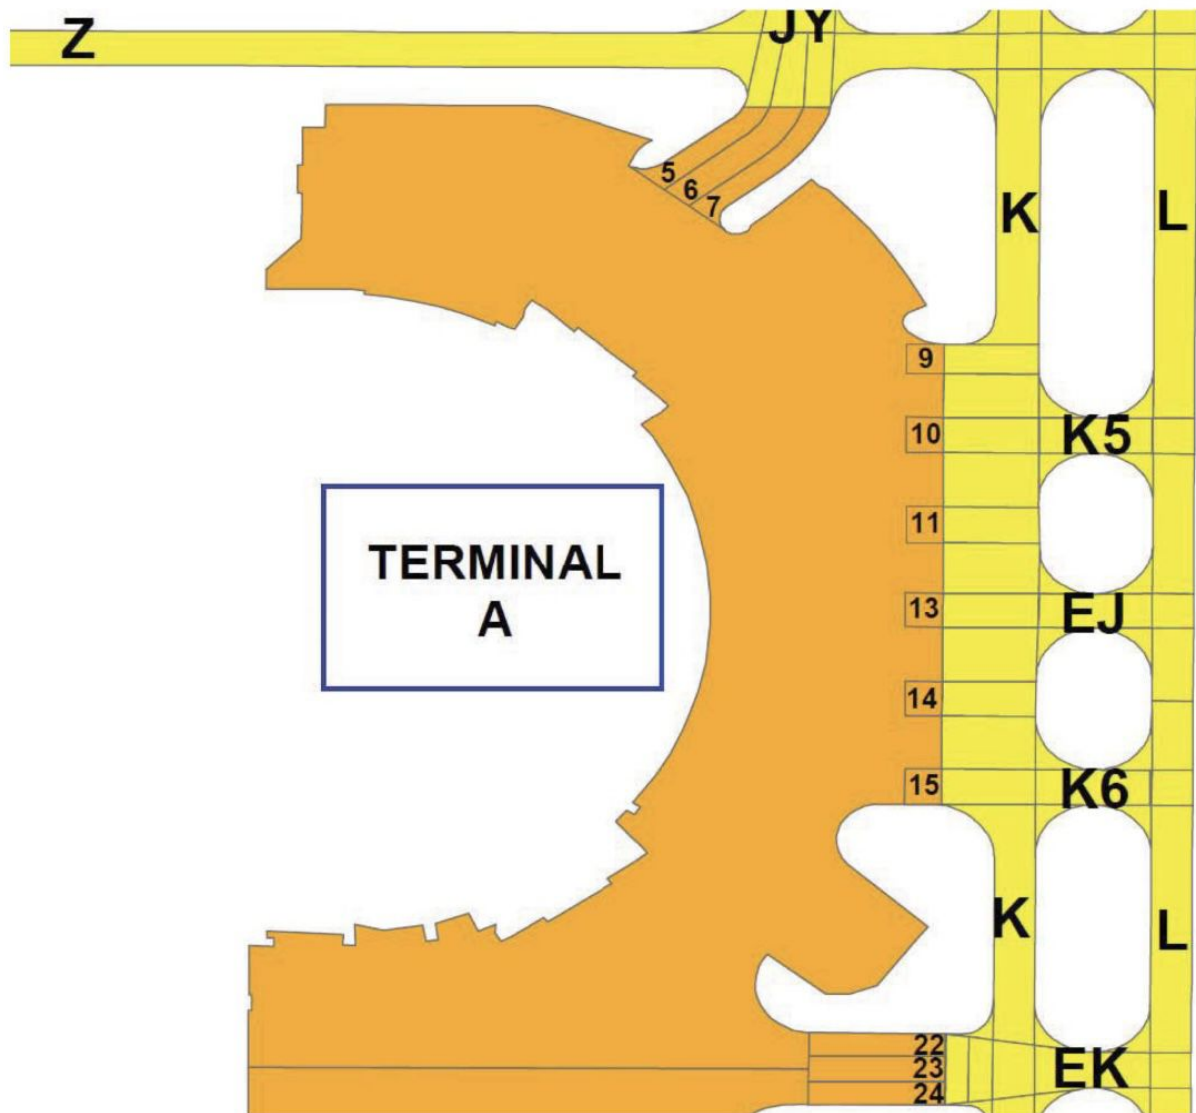


Figure 1.4 Terminal A - REP (Spots) 105-107, 9-15, 22-24

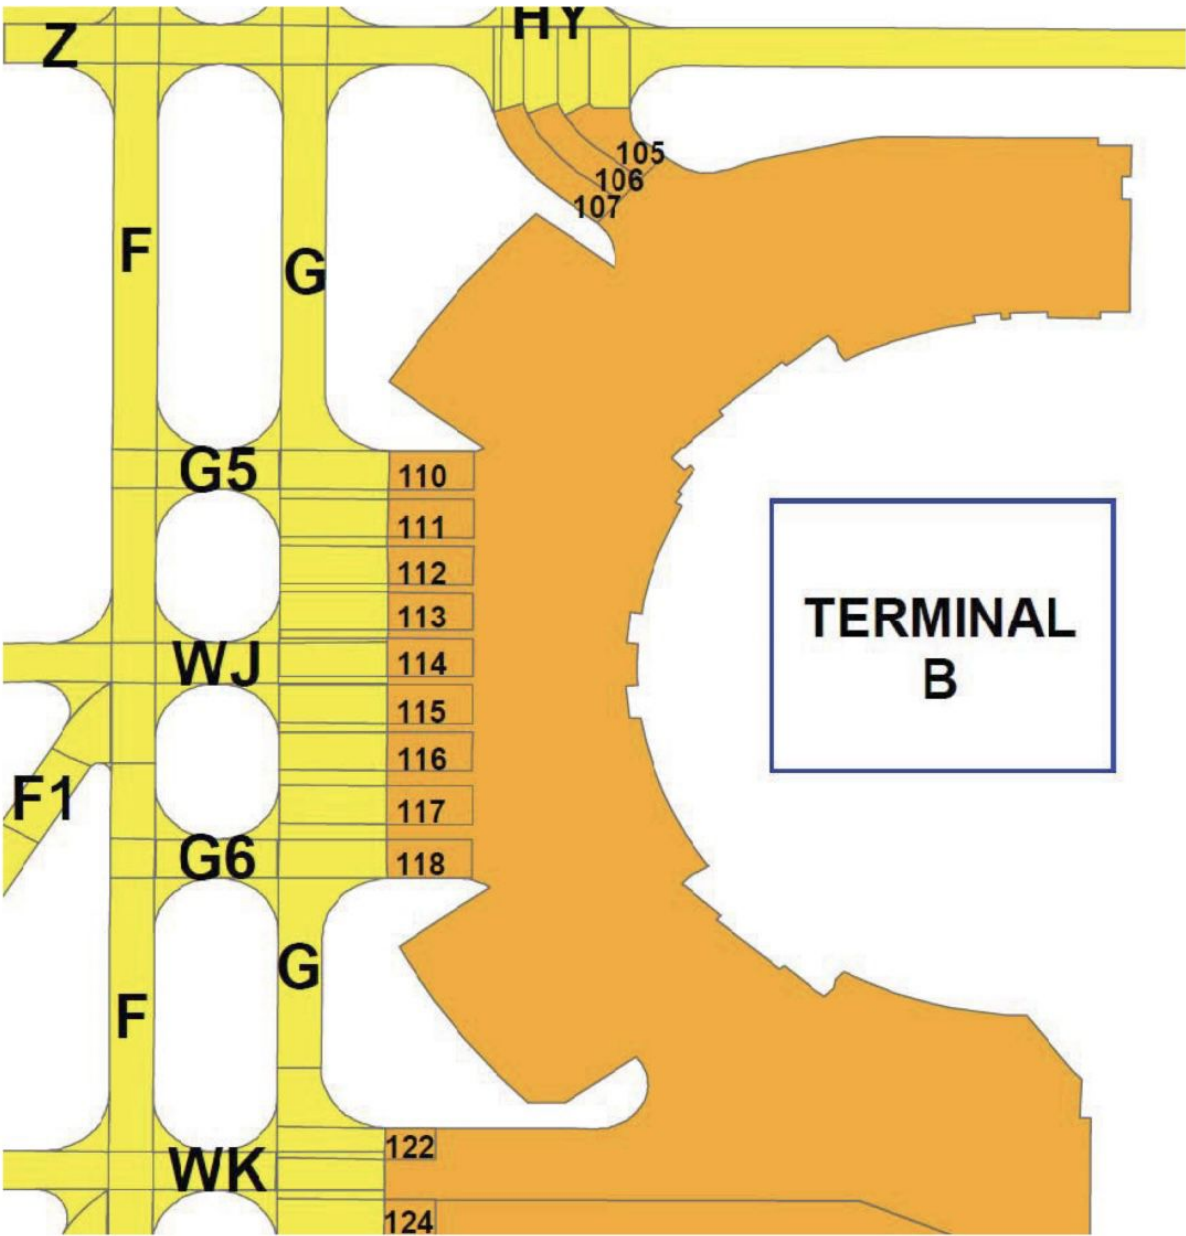


Figure 1.5 Terminal B - REP (Spots) 105-107, 110-118, 122, 124

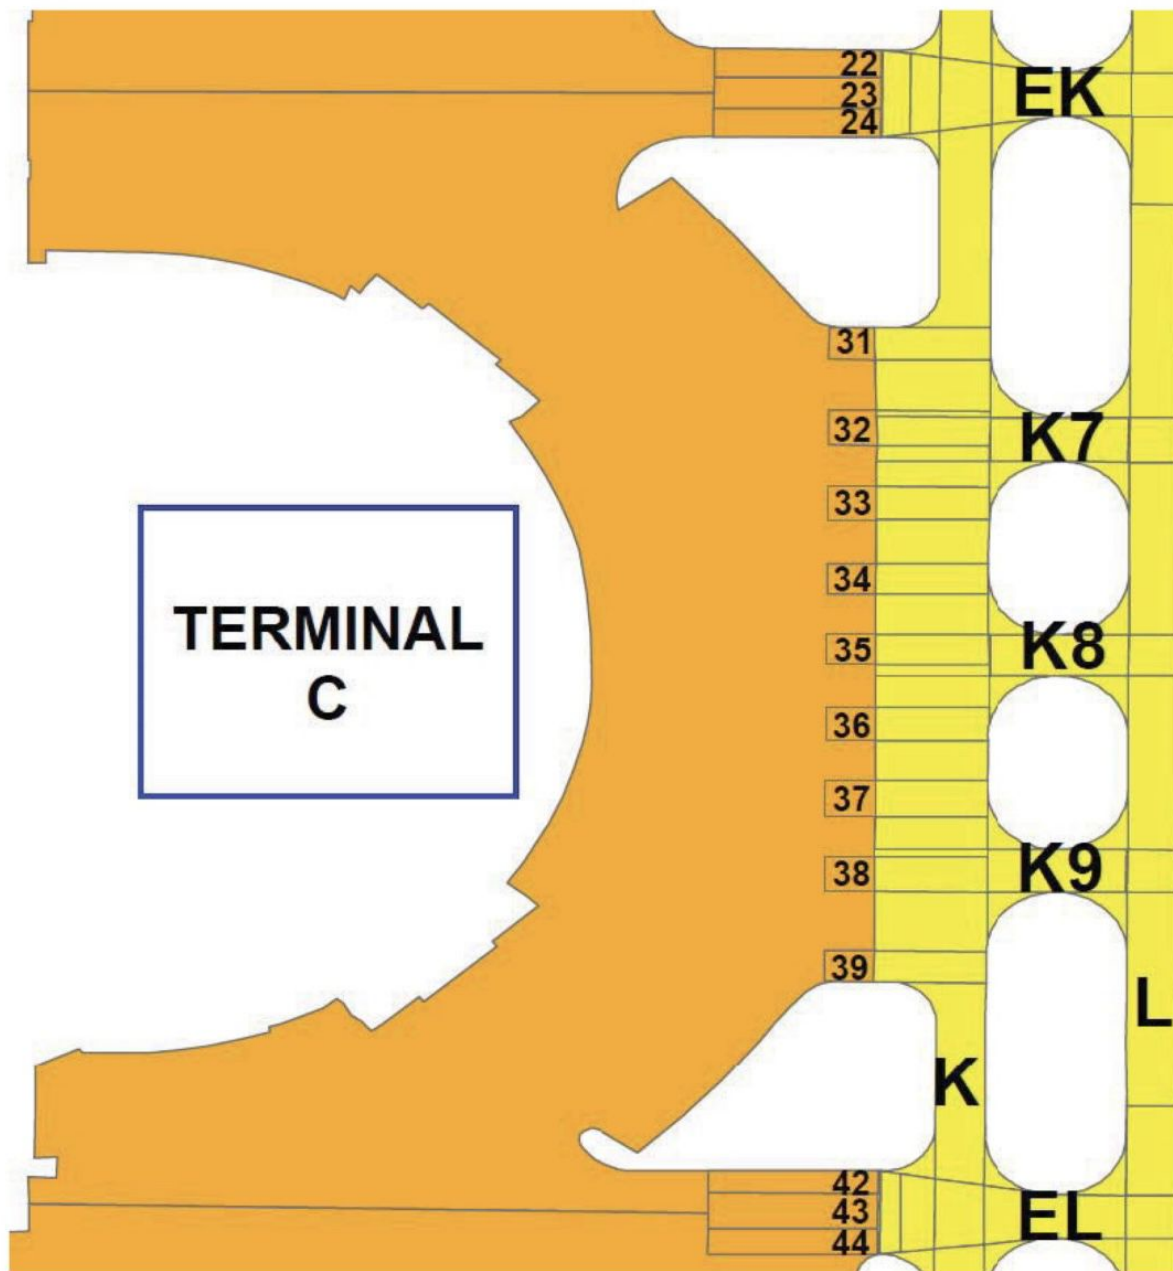


Figure 1.6 Terminal C - REP (Spots) 22-24, 31-39, 42-44

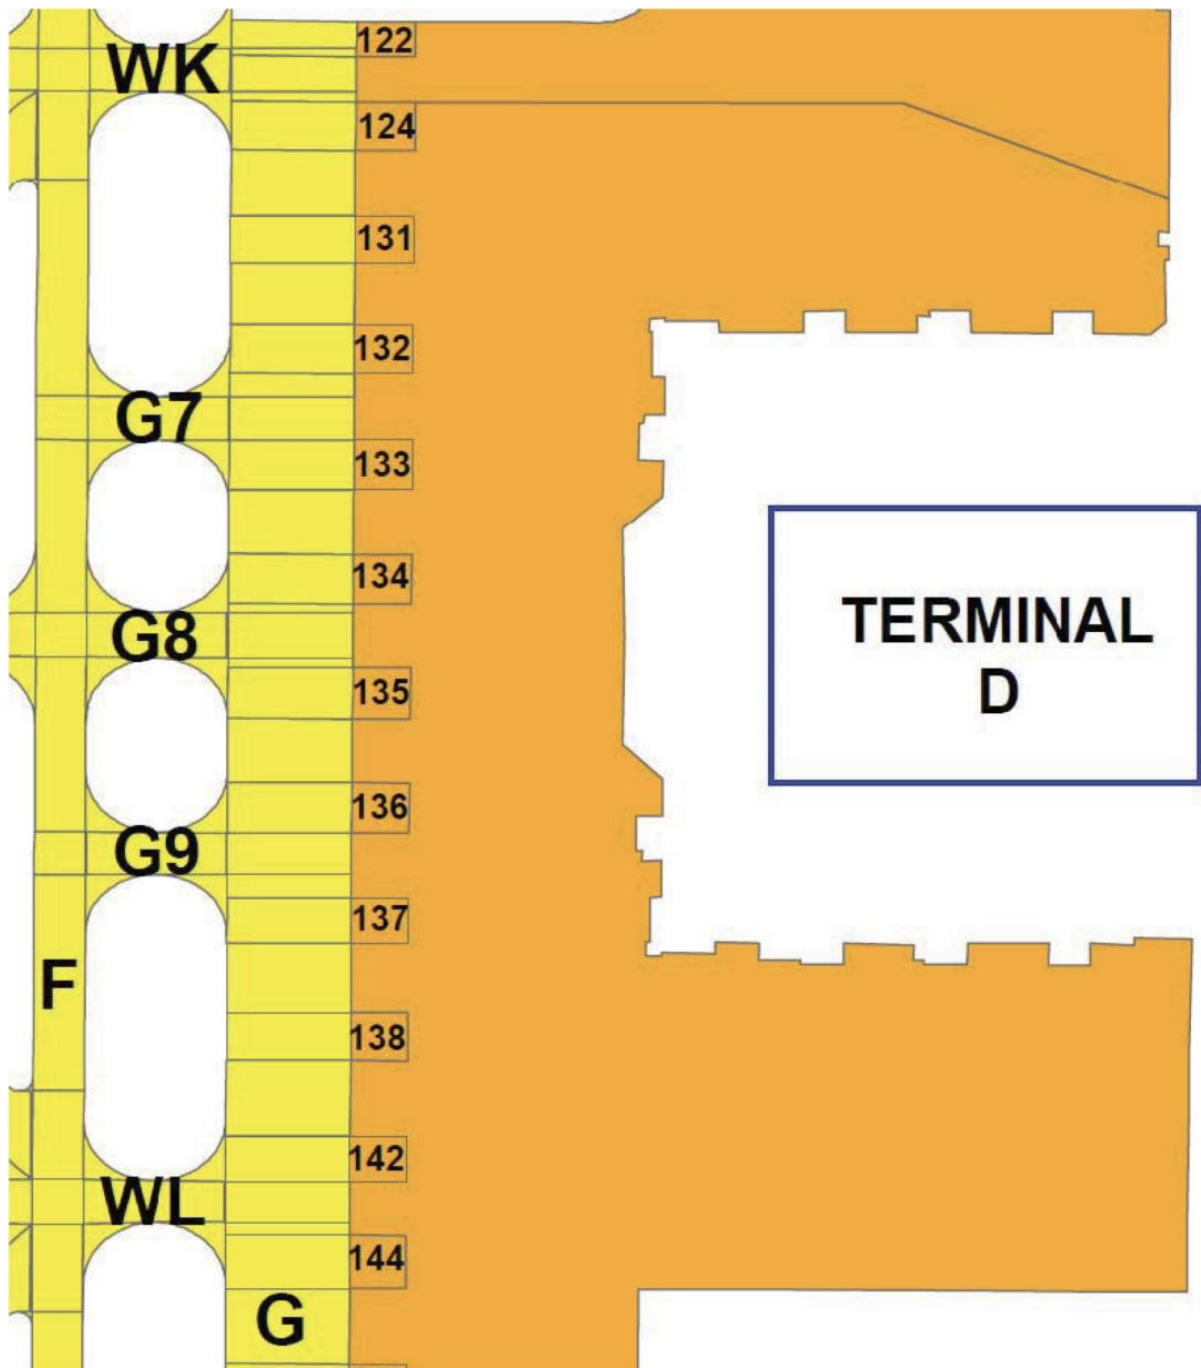


Figure 1.7 Terminal D - REP (Spots) 122-144

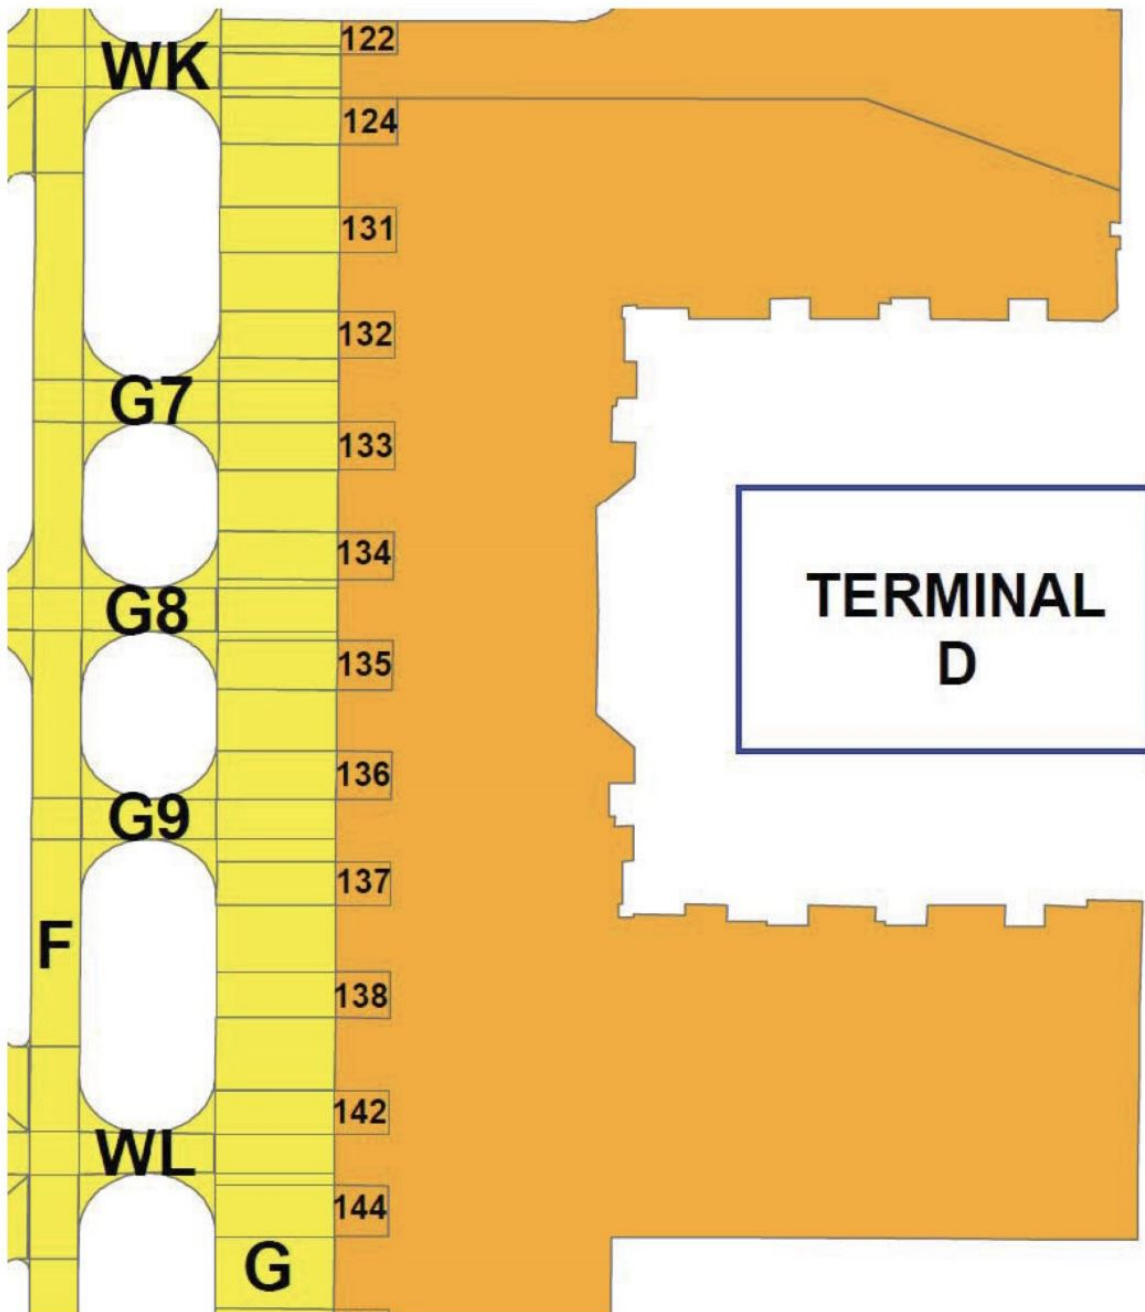


Figure 1.8 Terminal E - REP (Spots) 42-44, 45-49, 51-53

Arrival Standard Taxi Routes

When issued standard taxi routes for arrivals, aircraft will comply with the following taxi instructions unless otherwise directed by ATC:

Note: As soon as practical the cockpit crew will advise ground control when the aircraft must hold on the movement area or advise of the entrance taxiway/spot assigned by the ramp tower.

Additionally, the frequency assignment for aircraft crossing the taxiway A or Y bridge will normally be one of two frequencies: 121.65 or 121.85. Cockpit crews will use the assigned frequency.

After Crossing Runway 18L/36R

“Alpha Route”

Taxi via taxiway F and A, hold short of JA unless further taxi instructions are received. Contact ground control on (assigned frequency) on taxiway A bridge.

“Yankee Route”

Taxi via taxiway F and Y, hold short of JY unless further taxi instructions are received. Contact ground control on (assigned frequency) on taxiway Y bridge.

After Exiting Runway 17L/17C

“Echo Sierra Route” (Aircraft landing 17L):

Taxi via taxiway Q to taxiway ER, turn left on P and taxi via ES and JS. Contact ground control on (assigned frequency) on taxiway JS. Hold short of taxiway K12 unless further instructions are received.

“Echo Sierra Route” (Aircraft landing 17C exiting east):

Join taxiway P then taxi via ES and JS. Contact ground control on (assigned frequency) on taxiway JS. Hold short of taxiway K12 unless further instructions are received.

“Echo Sierra Route” (Aircraft landing 17C exiting west):

Join taxiway M, then taxi via ES and JS. Contact ground control on (assigned frequency) on taxiway JS. Hold short of taxiway K12 unless further instructions are received.

After Exiting Runway 35C

“Echo Echo Route” (Aircraft landing 35C exiting west):

Join taxiway M, then taxi via EE and K. Contact ground control on (assigned frequency) on taxiway K. Hold short of taxiway EF unless further instructions are received.

Landing Runway 13R

“Whiskey Kilo Route Hold Short Of Runway 18R”

After exiting runway 13R taxi via taxiways B, C and WK, hold short of runway 18R at WK. Monitor tower frequency on 124.15 when turning on taxiway C.

Caution: READ BACK OF “HOLD SHORT OF RUNWAY 18R”
REQUIRED.

Table 1.3 Arrival Standard Taxi Routes

Landing Runway	Taxi Instructions	Join Taxiway	Taxi	Hold Short	Notes
13R	Whiskey Kilo Route Hold Short of Runway 18R	B	B, C, WK	Rwy 18R	<u>Monitor</u> tower frequency on 124.15 when turning on taxiway C. READBACK OF “HOLD SHORT OF RUNWAY 18R” REQUIRED
17L	Echo Sierra Route	Q	ER, P, ES, JS	K12	<u>Contact</u> ground control on (assigned frequency) on taxiway JS.
17C exiting East	Echo Sierra Route	P	ES, JS	K12	<u>Contact</u> ground control on (assigned frequency) on taxiway JS.
17C exiting West	Echo Sierra Route	M	ES, JS	K12	<u>Contact</u> ground control on (assigned frequency) on taxiway JS.
35C exiting West	Echo Echo Route	M	EE, K	EF	<u>Contact</u> ground control on (assigned frequency) on taxiway K.
18L/R	Alpha Route	F after crossing or exiting 18L	F, A	JA	<u>Contact</u> ground control on (assigned frequency) on taxiway A bridge.
36L/R	Yankee Route	F after crossing or exiting 36R	F, Y	JY	<u>Contact</u> ground control on (assigned frequency) on taxiway Y bridge.

STANDARD TAXI INSTRUCTIONS FOR DEPARTURES

When issued standard taxi instructions by ground control, aircraft will comply with the following taxi routes unless otherwise directed by ATC.

DEPARTURES Runway 17R		
Route Designator	Spots	Taxi Route Detail
Runway 17R Outer	5, 6, 7	Taxi to Runway 17R via Taxiway JY, Y, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	9	Taxi to Runway 17R via Taxiway K, Z, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	10	Taxi to Runway 17R via Taxiway K5, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	11, 13, 14	Taxi to Runway 17R via Taxiway K, K5, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	15	Taxi to Runway 17R via Taxiway K6, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	22 through 32	Taxi to Runway 17R via Taxiway K, K6, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	33 through 49	Taxi to Runway 17R via Taxiway K, K7, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	51, 52, 53	Taxi to Runway 17R via Taxiway B, K, K7, L and EH. Monitor Tower 126.55 north of Taxiway Y.
	When on the Y Bridge: Taxi to Runway 17R via L and EH. Monitor Tower 126.55 north of Taxiway Y.	
Runway 17R Inner	5, 6, 7	Taxi to Runway 17R via Taxiway JY, Y, K and EG. Monitor Tower 126.55 north of Taxiway Y.
	9 through 49	Taxi to Runway 17R via Taxiway K and EG. Monitor Tower 126.55 north of Taxiway Y.
	51 through 53	Taxi to Runway 17R via Taxiway B, K and EG. Monitor Tower 126.55 north of Taxiway Y.
	When on the Y Bridge: Taxi to 17R via Taxiway K, and EG. Monitor Tower 126.55 north of Taxiway Y.	
Runway 17R Full Length	5, 6, 7	Taxi to Runway 17R via Taxiway JY, Y, J and EF. Monitor Tower 126.55 north of Taxiway Y.
	9 through 49	Taxi to Runway 17R via Taxiway K, Y, J and EF. Monitor Tower 126.55 north of Taxiway Y.
	51 through 53	Taxi to Runway 17R via Taxiway B, K, Y, J and EF. Monitor Tower 126.55 north of Taxiway Y.
	When on the Y Bridge: Taxi to Runway 17R via J and EF. Monitor Tower 126.55 north of Taxiway Y.	
Runway 17R Bridge	105, 106, 107	Taxi to Runway 17R via Taxiway HY and Y, hold short of JY unless further instructions are received. Contact Ground 121.65 on Taxiway Y bridge.
	110 through 150	Taxi to Runway 17R via Taxiway G and Y, hold short of JY unless further instructions are received. Contact Ground 121.65 on Taxiway Y bridge.

STANDARD TAXI INSTRUCTIONS FOR DEPARTURES

When issued standard taxi instructions by ground control, aircraft will comply with the following taxi routes unless otherwise directed by ATC.

DEPARTURES RUNWAY 18L		
Route Designator	Spots	Taxi Route Detail
Runway 18L Outer	When on the Z Bridge: Taxi to Runway 18L via Taxiway F and WH. Monitor Tower 124.15 north of Taxiway Y.	
	105, 106, 107	Taxi to Runway 18L via Z, F, and WH. Monitor Tower 124.15 north of Taxiway Y.
	110	Taxi to Runway 18L via Taxiway G5, F and WH. Monitor Tower 124.15 north of Taxiway Y.
	111 through 117	Taxi to Runway 18L via Taxiway G, G5, F and WH. Monitor Tower 124.15 north of Taxiway Y.
	118	Taxi to Runway 18L via Taxiway G6, F, and WH. Monitor Tower 124.15 north of Taxiway Y.
	122 through 150	Taxi to Runway 18L via Taxiway G, G6, F and WH. Monitor Tower 124.15 north of Taxiway Y.
	When on the B Bridge: Taxi to Runway 18L via Taxiway G, G6, F, and WH. Monitor Tower 124.15 north of Taxiway Y.	
Runway 18L Inner	When on the Z Bridge: Taxi to Runway 18L via G and WG. Monitor Tower 124.15 north of Taxiway Y.	
	105, 106, 107	Taxi to Runway 18L via Taxiway Z, G and WG. Monitor Tower 124.15 north of Taxiway Y.
	110 through 150	Taxi to Runway 18L via Taxiway G and WG. Monitor Tower 124.15 north of Taxiway Y.
	When on the B Bridge: Taxi to Runway 18L via Taxiway G and WG. Monitor Tower 124.15 north of Taxiway Y.	
Runway 18L Full Length	When on the Z Bridge: Taxi to Runway 18L via HY, Y, H and WF. Monitor Tower 124.15 north of Taxiway Y.	
	105, 106, 107	Taxi to Runway 18L via Taxiway HY, Y, H and WF. Monitor Tower 124.15 north of Taxiway Y.
	110 through 150	Taxi to Runway 18L via Taxiway G, Y, H and WF. Monitor Tower 124.15 north of Taxiway Y.
	When on the B Bridge: Taxi to Runway 18L via Taxiway G, Y, H and WF. Monitor Tower 124.15 north of Taxiway Y.	
Runway 18L Bridge	5, 6, 7	Taxi to Runway 18L via Taxiway Z, hold short of HY unless further instructions are received. Contact Ground, 121.85 on Taxiway Z bridge.
	9 through 49	Taxi to Runway 18L via Taxiway K and Z, hold short of HY unless further instructions are received. Contact Ground, 121.85 on Taxiway Z bridge.
	51 through 53	Taxi to Runway 18L via Taxiway B and hold short of HA unless further instructions are received. Contact Ground 121.85 on Taxiway B bridge.

STANDARD TAXI INSTRUCTIONS FOR DEPARTURES

When issued standard taxi instructions by ground control, aircraft will comply with the following taxi routes unless otherwise directed by ATC.

DEPARTURES RUNWAY 35L		
Route Designator	Spots	Taxi Route Detail
Runway 35L Outer	5, 6, 7	Taxi to Runway 35L via Taxiway Z, K, K10, L and EP. Monitor Tower 126.55 south of Taxiway A.
	9 through 44	Taxi to Runway 35L via Taxiway K, K10, L and EP. Monitor Tower 126.55 south of Taxiway A.
	45	Taxi to Runway 35L via Taxiway K10, L and EP. Monitor Tower 126.55 south of Taxiway A.
	45, 47, 48	Taxi to Runway 35L via Taxiway K, K11, L and EP. Monitor Tower 126.55 south of Taxiway A.
	49	Taxi to Runway 35L via Taxiway K11, L and EP. Monitor Tower 126.55 south of Taxiway A.
	51, 52, 53	Taxi to Runway 35L via JA, A, L and EP. Monitor Tower 126.55 south of Taxiway A.
	When on the A Bridge: Taxi to Runway 35L via L and EP. Monitor Tower 126.55 south of Taxiway A.	
Runway 35L Inner	5, 6, 7	Taxi to Runway 35L via Taxiway Z, K and EQ. Monitor Tower 126.55 south of Taxiway A.
	9 through 49	Taxi to Runway 35L via Taxiway K and EQ. Monitor Tower 126.55 south of Taxiway A.
	51 through 53	Taxi to Runway 35L via JA, A, K and EQ. Monitor Tower 126.55 south of Taxiway A.
	When on the A Bridge: Taxi to Runway 35L via K and EQ. Monitor Tower 126.55 south of Taxiway A.	
Runway 35L Full Length	5, 6, 7	Taxi to Runway 35L Taxiway via Z, K, A, JS and ER. Monitor Tower 126.55 south of Taxiway A.
	9 through 49	Taxi to Runway 35L via Taxiway K, A, JS and ER. Monitor Tower 126.55 south of Taxiway A.
	51 through 53	Taxi to Runway 35L via JA, A, JS, and ER. Monitor Tower 126.55 south of Taxiway A.
	When on the A Bridge: Taxi to Runway 35L via JS and ER. Monitor Tower 126.55 south of Taxiway A.	
Runway 35L Bridge	105, 106, 107	Taxi to Runway 35L via Taxiway Z, G, A, hold short of JA unless further instructions are received. Contact Ground 121.65 on Taxiway A bridge.
	110 through 150	Taxi to Runway 35L via Taxiway G, A, hold short of JA unless further instructions are received. Contact Ground 121.65 on Taxiway A bridge.

STANDARD TAXI INSTRUCTIONS FOR DEPARTURES

When issued standard taxi instructions by ground control, aircraft will comply with the following taxi routes unless otherwise directed by ATC.

DEPARTURES Runway 36R		
Route Designator	Spots	Taxi Route Detail
Runway 36R Outer	When on the Z Bridge: Taxi to Runway 36R via G, G10, F and WP. Monitor Tower 124.15 south of Taxiway A.	
	105 through 107	Taxi to Runway 36R via Taxiway Z, G, G10, F and WP. Monitor Tower 124.15 south of Taxiway A.
	110 through 146	Taxi to Runway 36R via Taxiway G, G10, F and WP. Monitor Tower 124.15 south of Taxiway A.
	147 through 150	Taxi to Runway 36R via Taxiway G, G11, F and WP. Monitor Tower 124.15 south of Taxiway A.
	When on the B Bridge: Taxi to Runway 36R via F and WP. Monitor Tower 124.15 south of Taxiway A.	
Runway 36R Inner	When on the Z Bridge: Taxi to Runway 36R via G and WQ. Monitor Tower 124.15 south of Taxiway A.	
	105, 106, 107	Taxi to Runway 36R via Taxiway Z, G and WQ. Monitor Tower 124.15 south of Taxiway A.
	110 through 150	Taxi to Runway 36R via Taxiway G and WQ. Monitor Tower 124.15 south of Taxiway A.
	When on the B Bridge: Taxi to Runway 36R via G and WQ. Monitor Tower 124.15 south of Taxiway A.	
Runway 36R Full Length	When on the Z Bridge: Taxi to Runway 36R via G, A, HA and WR. Monitor Tower 124.15 south of Taxiway A.	
	105 through 107	Taxi to Runway 36R via Taxiway Z, G, A, HA and WR. Monitor Tower 124.15 south of Taxiway A.
	110 through 150	Taxi to Runway 36R via Taxiway G, A, HA and WR. Monitor Tower 124.15 south of Taxiway A.
	When on the B Bridge: Taxi to Runway 36R via HA and WR. Monitor Tower 124.15 south of Taxiway A.	
Runway 36R Bridge	5, 6, 7	Taxi to Runway 36R via Taxiway Z and hold short of HY unless further instructions are received. Contact Ground on 121.85 on Taxiway Z bridge.
	9 through 49	Taxi to Runway 36R via Taxiway K and B, hold short of HA unless further instructions are received. Contact Ground 121.85 on Taxiway B bridge.
	51, 52, 53	Taxi to Runway 36R via Taxiway B and hold short of HA unless further instructions are received. Contact Ground 121.85 on Taxiway B bridge.

STANDARD TAXI INSTRUCTIONS FOR ARRIVALS

When issued standard taxi instructions by Ground Control, aircraft will comply with the following taxi routes unless otherwise directed by ATC.

As soon as practical, the cockpit crew will advise Ground Control when the aircraft must hold on the movement area or advise of the entrance taxiway/spot assigned by the Ramp Tower.

AFTER CROSSING RUNWAY 18L/36R	
Route Designator	Taxi Route Detail
ALPHA ROUTE	Taxi via Taxiway F and A, hold short of JA unless further taxi instructions are received. Contact Ground Control on (assigned frequency) on Taxiway A bridge.
YANKEE ROUTE	Taxi via Taxiway F and Y, hold short of JY unless further taxi instructions are received. Contact Ground Control on (assigned frequency) on Taxiway Y bridge.

AFTER EXITING RUNWAY 17L/17C		
Route Designator	Taxi Route Detail	
ECHO SIERRA ROUTE	Aircraft landing 17L	Taxi via Taxiway Q to Taxiway ER, turn left on P and taxi via ES and JS. Monitor Ground Control on 121.65 (or assigned frequency) on Taxiway P. Hold short of Taxiway K12 unless further instructions are received.
	Aircraft landing 17C	Join Taxiway M, then taxi via Taxiway ES and JS. Monitor Ground Control on 121.65 (or assigned frequency) south of Taxiway A. Hold short of Taxiway K12 unless further instructions are received.
	Aircraft assigned TWY P	Join Taxiway P, then taxi via ES and JS. Monitor Ground Control on 121.65 (or assigned frequency) south of Taxiway A. Hold short of Taxiway K12 unless further instructions are received.

AFTER CROSSING RUNWAY 35C FROM EAST TO WEST	
Route Designator	Taxi Route Detail
ECHO ECHO ROUTE	Join Taxiway M, then taxi via EE and K. Contact Ground Control on (assigned frequency) on Taxiway K. Hold short of Taxiway EF on Taxiway K unless further instructions are received.

AFTER EXITING RUNWAY 35C/35R or 31R		
Route Designator	Taxi Route Detail	
ECHO ECHO ROUTE	Aircraft landing 35R	Join Taxiway Q, then taxi via Z, turn right on Taxiway N, then taxi via EE and K. Monitor Ground Control on 121.65 (or assigned frequency) on Taxiway N. Hold short of Taxiway EF on Taxiway K unless further instructions are received.
	Aircraft landing 35C	Join Taxiway M, then taxi via Taxiway EE and K. Monitor Ground Control on 121.65 (or assigned frequency) north of Taxiway Y. Hold short of Taxiway EF on Taxiway K unless further instructions are received.
	Aircraft landing 31R	Join Taxiway R, then taxi via P and Y, turn right on Taxiway N, then taxi via EE and K. Monitor Ground Control on 121.65 (or assigned frequency) on Taxiway N. Hold short of Taxiway EF on Taxiway K unless further instructions are received.
	Aircraft assigned TWY N	Join Taxiway N, then taxi via Taxiway EE and K. Monitor Ground Control on 121.65 (or assigned frequency) north of Taxiway Z. Hold short of Taxiway EF on Taxiway K unless further instructions are received.